

MODEL: CC-A2652

READY • SET • MOUNT®

FULL-MOTION WALL MOUNT FOR LCD, PLASMA, AND LED DISPLAYS INSTRUCTION MANUAL

Thank-you for purchasing a Ready-Set-Mount® Product! The Ready-Set-Mount® Plasma/LCD wall mount allows you to easily, quickly and safely mount your Plasma/LCD television to the wall. Please read these instructions carefully to ensure proper use. Check the VESA compatibility of your product for proper installation. For further detailed instructions, visit our web site at www.readysetmount.com.

Specifications

Display Size: 26" to 55"
Maximum Load: 60 kgs (132 lbs)
Mounting Pattern: 600 mm x 400 mm (23.6" x 15.7") max
Tilt Range: up to 15° down
Profile: 5.8 cm to 33.4 cm (2.28" to 13.15")

Box Contents

Full-motion Mount (x1)
Mount Arm (x2)
Instruction Manual (x1)
Hardware Kit (x1)

Tools Required











Phillips Head Screw Driver
Ratchet or Driver with 13 mm (1/2") Socket
Electric or Portable Drill
6 mm (1/4") Drill Bit and Stud Finder for Drywall Installation
10 mm (3/8") Masonry Bit for Concrete Installation
Level

Warnings

1. Read these instructions before you begin. If you are unsure of any part of the process, contact a professional contractor or installer for assistance. Improper installation can result in injury or damage.
2. The wall or mounting surface must be capable of supporting the combined weight of the mount and the display; if not, the structure must be reinforced.
3. Locate pipes, wires, or any other hazards in the wall where you wish to install the mount before drilling.
4. Safety gear and proper tools must be used. Failure to do so can result in injury or damage.
5. A minimum of two people are required for installation. Do not attempt to install this mount alone under any circumstances.
6. Follow all instructions and recommendations regarding adequate ventilation and suitable locations for mounting your display. Consult the owner's manual for your particular display for more information.

CAUTION: This wall mount is intended for use only with the maximum weight of 60 kg (132 lbs). Use with heavier than the maximum weights indicated may result in instability causing possible injury.

Hardware Kit

- | | | | |
|---------------------------|---|-------------------------|---|
| (A) M8 x 63 Lag Bolt (x4) |  | (F) M8 x 12 Screw (x4) |  |
| (B) Lag Bolt Washer (x4) |  | (G) M8 x 30 Screw (x4) |  |
| (C) Concrete Anchor (x4) |  | (H) M6 Washer (x4) |  |
| (D) M6 x 12 Screw (x4) |  | (I) Spacer (x8) |  |
| (E) M6 x 30 Screw (x4) |  | (J) Safety Stopper (x2) |  |

2

Part 1A – Mounting to the Wall (Drywall)

IMPORTANT! For safety reasons, this mount must be secured to a wood stud capable of supporting the combined weight of the mount and display. Do not mount to drywall alone.

1. Use a high quality stud finder to locate a stud where you wish to install your mount. Mark both edges of the stud to help identify the exact center.

NOTE: You must use the center of the stud to avoid cracking or splitting the wood during installation.



2. Place the mount against the wall over the marked stud.

Make sure it is level.

3. While another person holds the mount in place, mark four locations (two at the top and two at the bottom) for securing the mount to the wall.

4. Set the mount aside and drill a 6 mm (1/4") pilot hole at each marked location.

5. Place the mount against the wall over the drilled holes, making sure the arrow on the mount points up. Attach the mount to the wall using the lag bolts (A) and lag bolt washers (B) provided. Do not over-tighten these bolts and do not release the mount until all bolts are in place. Ensure that the mount remains level after all bolts are secured.

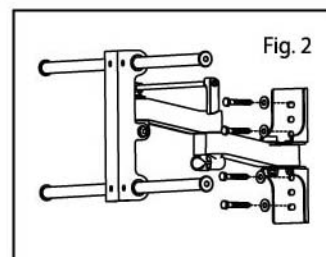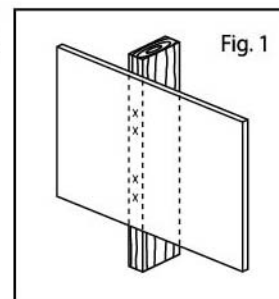

Part 1B – Mounting to the Wall (Concrete)

IMPORTANT! For safety reasons, the concrete wall must be capable of supporting the combined weight of the mount and the display. The manufacturer takes no responsibility for failure caused by walls of insufficient strength.

1. Place the mount against the wall in the desired location. Make sure it is level.

2. While another person holds the mount in place, mark four locations (two at the top and two at the bottom) for securing the mount to the wall.



3. Set the mount aside and drill a 10 mm (3/8") hole at each marked location. Remove any excess dust from the holes.

4. Insert a concrete anchor (C) into each hole so that it is flush with the concrete surface. A hammer can be used to lightly tap the anchors into place if necessary.

NOTE: If the concrete wall is covered by a layer of plaster or drywall, the concrete anchor must pass completely through the layer to rest flush with the concrete surface.

5. Place the mount against the wall over the drilled holes, making sure the arrow on the mount points up. Attach the mount to the wall using the lag bolts (A) and lag bolt washers (B) provided.

Do not over-tighten these bolts and do not release the mount until all bolts are in place. Ensure that the mount remains level after all bolts are secured.

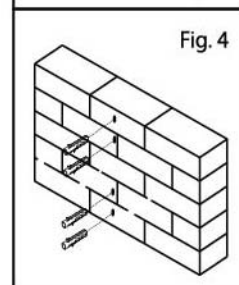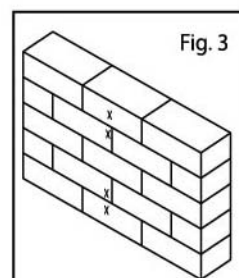

Part 2 – Attaching the Mount Arms to the Display

IMPORTANT! Use extra care during this part of the installation. If possible, avoid placing your display facedown as it may damage the viewing surface.

NOTE: This mount comes with a selection of different screw diameters and lengths to accommodate a wide variety of display models. Not all of the hardware in the kit will be used. If you cannot find the appropriate screw size in the kit provided, consult the manufacturer of your display for more information.

1. Determine the correct length of screw to use by examining the back of your display:
 - A. If the back of your display is flat and the mounting holes are flush with the surface, you will use the shorter screws (D or F) from the hardware kit.
 - B. If the back of your display is curved, has a protrusion, or if the mounting holes are recessed, you will need to use the longer screws (E or G) and may also need to use the spacers (I).
2. Determine the correct diameter of screw to use by carefully trying one of each size (M6 and M8) from the hardware kit. Do not force any of the screws – if you feel resistance stop immediately and try a smaller diameter screw.
3. Attach the mount arms to the back of your display using the screws identified in steps 1 and 2:
 - A. If you are using the M6 screws you will also need to use the M6 washers (H). M8 screws do not require washers.
 - B. If you are using the longer screws on a display with a curved or recessed back, you may also need to use the spacers (I). Use one spacer or two spacers stacked as needed. Only use a spacer if necessary.

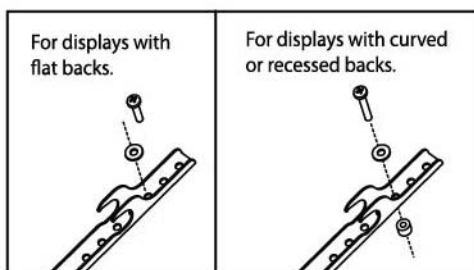


Fig. 5

NOTE: The mount arms must be attached with the safety tabs facing outward (i.e. away from the middle of the display). Otherwise, the safety tabs cannot be easily accessed.

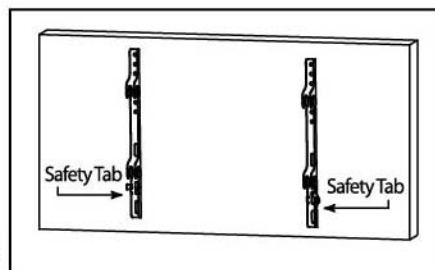


Fig. 6

4

Part 3 – Final Assembly

1. With the help of another person, carefully lift your display and place it on the mount. Do not release the display until the mount arms have securely hooked onto the mount.
2. Move the safety tab located on each arm into position so that it prevents the display from being lifted from the mount. Insert a safety stopper (J) into each tab to keep it in place. A padlock (not included) can be used in place of one of the safety stoppers to help prevent unwanted removal of the display.

IMPORTANT! The safety tabs and stoppers must be used at all times to prevent the display from being accidentally knocked from the mount.

3. Cables can be routed through the hooks located on the mount to keep them organized and out of the way.

OPERATION AND ADJUSTMENT

1. To change the tilt angle of your display, have one person hold the display firmly in place while another person loosens the tilt knob located on the right side of the mount. Once loosened, you may move your display to the desired position. Re-tighten the tilt knobs to lock the tilt angle in place. Do not release the display until the tilt knobs are fully tightened.

NOTE: The tilt adjustment knobs have a ratchet feature. If you need to change the position of the knob without tightening or loosening it, simply pull the knob outward before turning.

2. Periodically clean your mount with a dry cloth. Inspect all screws and hardware at regular intervals to ensure that no connections have become loose over time. Re-tighten as needed.

WARRANTY PERIOD: 1 YEAR. Ready-Set-Mount is a registered trademark of Creative Concepts International, LLC. Supplier Warranty: Creative Concepts International, LLC will replace this product if, due to defective parts or workmanship, it does not perform as specified by Creative Concepts International, LLC. This limited warranty extends to the original purchaser for 1 year from the date of purchase. Creative Concepts International, LLC shall warrant any replacement product for the remainder of the Warranty Period of the product which it replaces. In no event does this warranty extend to instances where the product is opened or damaged through abnormal use, misuse, installation, mishandling, neglect, accident tampering or detrimental exposure, including without limitation: (i) abnormal wear and tear or damage caused by use or handling which is contrary to the instructions published by Creative Concepts International, LLC, (ii) any cause beyond the control of Creative Concepts International, LLC, including without limitation conditions caused by movement, settlement or structural defects of the environment in which the product is installed, fire, wind, hail, flood, lightning or other acts of God, any conditions related to, or caused by, intentional acts, accidents, negligence or foreign matter or energy, or (iii) any damage to the finish of a product after it leaves Creative Concepts International, LLC, manufacturing facility. EXCEPT FOR THE FOREGOING, THE PRODUCT IS PROVIDED AS IS AND CREATIVE CONCEPTS INTERNATIONAL, LLC MAKES NO REPRESENTATION OR WARRANTY (WHETHER STATUTORY, EXPRESS OR IMPLIED), INCLUDING WITHOUT LIMITATION ANY REPRESENTATION OR WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, WITH RESPECT TO THE PRODUCT OR OTHERWISE. TO THE EXTENT AN IMPLIED WARRANTY CANNOT BE EXCLUDED, SUCH WARRANTY IS LIMITED IN DURATION TO THE WARRANTY PERIOD. THIS DISCLAIMER AND EXCLUSION SHALL APPLY EVEN IF THE EXPRESS WARRANTY SET FORTH ABOVE FAILS OF ITS ESSENTIAL PURPOSE. In no event will Creative Concepts International, LLC be liable for (i) incidental, special or consequential damages arising out of the use or inability to use the product, or (ii) any OTHER damages in excess of the purchase price arising out of the use or inability to use the product.

READY • SET • MOUNT®

**Questions? Visit our website at www.readysetmount.com
or call 1-888-530-7904**

Ready-Set-Mount is a registered trademark of Creative Concepts International. Copyright 2011 © Creative Concepts International. All Rights Reserved.